

JUST LIGHT.

Removal instruction 997575 / 998557 / 997576

Instructions on how light sources and separate control gears can be removed without being permanently damaged for verification purposes by market surveillance authorities:

An Instruction on how to remove the light source from a containing product is provided for reference:



The removal may only be carried out by a professional.

Step 1: Insert the screwdriver into the edge gap of the PVC hood carefully.



Step 2: Pry open the PVC hood with a screwdriver. Take care of the LEDs during this step, do not touch them.



Step 3: Remove all the PVC Hood.

Step 4: Remove the wire from the board by using electric iron. Take care of the LEDs during this step, do not touch them.



Step 5: Pull the light source out of the containing product.

Step 6: Fix a new connection wire to the light source by using electric iron. Take care of the LEDs during this step, do not touch them.

Step 7: Provide the rated current to the light source and operate the ErP testing.

